Step 3.Shape the branches to your preference by working from the bottom to the top. When adjusting branches, ensure that all wires are free of branch hinges.

Step 4.Connect the plug(s) securely to the extension cord(s) as per the color labels indicated in attached photo and insert the green label extension cord plug into the wall outlet.

Step 5.When finished shaping the branches, slightly upsweep all branch tips for a uniform look.

Operation

Turning on the tree

NOTE: If some bulbs do not light or flicker, search for any loose plugs and/or broken, loose, or missing bulbs. Replace bulbs promptly with the replacement bulbs provided in order to maintain the performance and life expectancy of your tree.

Step 1.Connect the light strings of the tree together and plug the power cord into a wall outlet.

Step 2.If the tree comes with a foot pedal, step on the On/Off button.

Maintenance

Spare parts

This tree package includes hinge pins, washers, bulbs and fuses for any replacement or repair that you need to perform on your tree. If extra parts are needed, contact the Customer Service Team at 1-877-527-0313 between the hours of 8 am and 5 pm EST, Monday through Friday.

Repairing Loose Hinges

Step 1.Place the branch into the slot of the bracket.

Step 2.Insert a new hinge pin through the holes of the bracket and secure with a washer.

User servicing instructions

Fused Lamp Replacement

WARNING - Risk of fire: This product employs overload protection (fuse lamp) in each series light circuit to provide overload protection in addition to the fuse(s) located in the plug. Do not replace the fuse lamp contained in this set with any other type of lamp, use only spare fuse lamps provided with this product. In case of a burnt out FUSED lamp, the entire series of 50 lamps will be out. To replace the fused lamp:

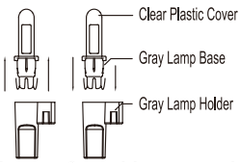

1. Grasp the plug and remove from the receptacle or other outlet device. Do not unplug by pulling the cord.
2. Locate the fused lamp with gray color lamp holder. Pull the burnt fused lamp and plastic lamp base straight out of the lamp holder.
3. Replace with a spare fused lamp. The fused lamp can be distinguished by a gray lamp base and an additional clear plastic cover.
4. Plug in the lights again.

Care and Cleaning

Step 1.Remove all ornaments and decorations.

Step 2.Unplug the cord from the wall and then unplug each section of the tree.

Step 3.Gently lift the tree top straight up to remove from the center sections and fold all branches towards the pole.

Step 4.Repeat this step for the bottom tree section.

Step 5.Carefully place all tree sections into a shipping box and tape it shut.

Step 6.Store your tree in a cool, dry place away from sunlight.

Troubleshooting

Problem	Solution
The tree does not light	Ensure that all tree sections are plugged into each other and that the tree is plugged into the wall. If your tree came with a foot pedal, step on the On/Off button.
	Check for blown fuses at the power cord plug. Replace as needed with the replacement fuses provided.
	Check for loose, broken, or missing bulbs and replace as needed with the replacement bulbs provided